

GB Cutting table for radiator 3126

D Kürzungstabelle für Strahler 3126

S Kaptabell för radiator 3126

SMARTEQ antennas

SMARTEQ Wireless AB
 Enebyberg, Sweden
 info@smarteq.se
 www.smarteq.com

GB Cutting table for radiator 3126.04.00.00


- A** = Length of the Radiator bottom part measured inclusive fitting and up to coil.
- B** = Radiator total length measured exclusive of knob.
- ◆ Frequency range 345–500 MHz.

D Kürzungstabelle für Strahler 3126.04.00.00

- A** = Unterteile den Strahler gemessen einschließlich Gewindebuchse. (Unter und ohne die Spule).
- B** = Ganze Strahler gemessen ohne Schutzkappe.
- ◆ Frequenzbereich 345–500 MHz.

S Kaptabell för radiator 3126.04.00.00

- A** = Radiatorns undre del mätt inklusive förskruvning och upp till spolen.
- B** = Radiatorns totala längd mätt utan skyddsknopp.
- ◆ Frekvensområde 345–500 MHz.

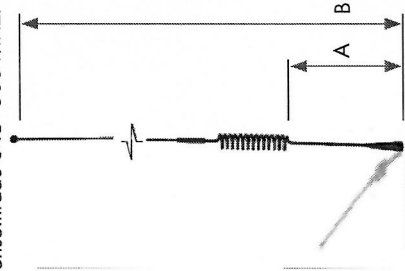

Base 128, 1123, 1131, 2500 & Ant

Frequency (MHz)	A (mm)	B (mm)
365	180	763
380	170	734
385	165	732
390	161	720
395	157	708
400	153	696
405	150	684
410	146	672
415	143	660
420	139	648
425	136	636
430	133	624
435	130	612
440	126	600
445	123	590
450	120	580
455	117	570
460	114	560
465	111	550
470	108	540
475	105	530
480	102	514
485	99	505
490	96	496
495	93	487
500	90	478

MaxiMag130

Frequency (MHz)	A (mm)	B (mm)
345	180	763
380	147	693
385	141	678
390	136	664
395	131	652
400	126	640
405	122	630
410	118	620
415	114	611
420	110	602
425	106	593
430	102	584
435	98	575
440	94	566
445	90	557
450	87	548
455	84	539
460	81	530
465	78	521
470	75	512
475	72	503
480	69	494

